

## Model 200/225 Mounted Single Sentry

Model # SS-200/225-MSS



The **Mounted Sentry Single** fume extractor provides an excellent fume extraction choice for small or limited workspace environments. The unit features a self-supportive flex arm that provides source capture of airborne contaminants, while mounting options can free up much needed workspace. Mounting configurations include bench-mounting, under-the table mounting, and shelf or wall mounting.

Typical applications for this unit include *soldering, chemical fumes, solvent and epoxy fumes, laser fumes, light grinding, and many other procedures that involve the emission of particulate and fumes.*

The high-quality filter media for this unit used depends on the application being performed, but typically includes **HEPA filters** (up to 99.97% efficiency on particles 0.3 microns and larger), **ASHRAE filters** (up to 95% efficient on particles 0.5 microns and larger), **Activated Carbon**, and **specialty-blended filtration media** [i.e. acid gas, mercury, aldehyde, and ammonia].

The **Mounted Single Sentry** offers an effective, quiet and economical solution to many fume extraction needs with limited workspaces.

A larger model [SS-300-MSS] and a dual-arm unit [SS-200/225-MSD] are also available.



Model 200/225 Mounted Single Sentry



Model 200/225 Mounted Single Sentry easily mounts on the wall to free up benchtop space.


### Product Features

- **Included:** self-supportive 28" L flex arm and mounting brackets
- **Optional:** variable speed controller (115V only) and hour counter
- Reliable, low maintenance operation
- Quiet operation
- Simple, quick "no tool" filter change
- Long filter life
- Small footprint



21221 FM 529 Rd, Cypress, TX 77433  
1.800.799.4609 • sales@sentryair.com  
[www.sentryair.com](http://www.sentryair.com)

## Product Specifications

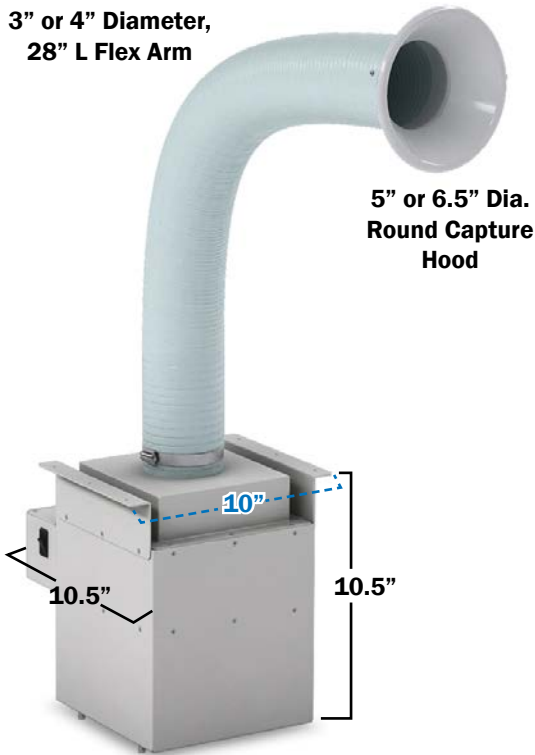

Dimensions are approximate.



21221 FM 529 Rd  
Cypress, TX 77433  
1.800.799.4609  
sales@sentryair.com

[www.sentryair.com](http://www.sentryair.com)

Base Unit Dimensions	<b>Length:</b> 10.5" <i>(includes control box)</i> <b>Width:</b> 10" <i>(includes mounting brackets)</i> <b>Height:</b> 10.5"
Arm Dimensions	3" or 4" diameter, 28" long 5" or 6.5" capture hood
Cabinet Material	16 ga. carbon steel
Weight	Approx. 12 lbs
Air Volume (approximately)	<b>Pre-Filter + HEPA:</b> <b>200:</b> up to 80 CFM <b>225:</b> up to 91 CFM
Electrical	<b>200:</b> 115/1/60, 0.3 amps 220/1/50, 0.2 amps <b>225:</b> 115/1/60, 0.46 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (High at 3' from inlet)	<b>200:</b> Approx. 56 dba <b>225:</b> Approx. 64 dba
Main Filter Options	<i>Depending on the Application:</i> <b>200 - Chemical:</b> Activated Carbon Specialty-Blended Filter Media [i.e. acid gas, mercury, aldehyde, and ammonia] <b>225 - Particulate:</b> HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger] ULPA [up to 99.9995% efficiency on particles 0.12 microns and larger]
US Patent	#5,843,197